

Lucid Series RF Analog Signal Generator

Rackmount Model

User Manual

Rev. 1.1

Distribution in the UK & Ireland



**Characterisation,
Measurement &
Analysis**

Lambda Photometrics Limited
Lambda House Batford Mill
Harpenden Herts AL5 5BZ
United Kingdom
E: info@lambdaphoto.co.uk
W: www.lambdaphoto.co.uk
T: +44 (0)1582 764334
F: +44 (0)1582 712084

WARRANTY STATEMENT

Products sold by Tabor Electronics Ltd. are warranted to be free from defects in workmanship or materials. Tabor Electronics Ltd. will, at its option, either repair or replace any hardware products which prove to be defective during the warranty period. You are a valued customer. Our mission is to make any necessary repairs in a reliable and timely manner.

Duration of Warranty

The warranty period for this Tabor Electronics Ltd. hardware is one year, except software and firmware products designed for use with Tabor Electronics Ltd. Hardware is warranted not to fail to execute its programming instructions due to defect in materials or workmanship for a period of ninety (90) days from the date of delivery to the initial end user.

Return of Product

Authorization is required from Tabor Electronics before you send us your product for service or calibration. Call your nearest Tabor Electronics support facility. A list is located on the last page of this manual. If you are unsure where to call, contact Tabor Electronics Ltd. Tel Hanan, Israel at 972-4-821-3393 or via fax at 972-4-821-3388. We can be reached at: support@tabor.co.il

Limitation of Warranty

Tabor Electronics Ltd. shall be released from all obligations under this warranty in the event repairs or modifications are made by persons other than authorized Tabor Electronics service personnel or without the written consent of Tabor Electronics.

Tabor Electronics Ltd. expressly disclaims any liability to its customers, dealers and representatives and to users of its product, and to any other person or persons, for special or consequential damages of any kind and from any cause whatsoever arising out of or in any way connected with the manufacture, sale, handling, repair, maintenance, replacement or use of said products.

Representations and warranties made by any person including dealers and representatives of Tabor Electronics Ltd., which are inconsistent or in conflict with the terms of this warranty (including but not limited to the limitations of the liability of Tabor Electronics Ltd. as set forth above), shall not be binding upon Tabor Electronics Ltd. unless reduced to writing and approved by an officer of Tabor Electronics Ltd.

This document may contain flaws, omissions or typesetting errors. No warranty is granted nor liability assumed in relation thereto. The information contained herein is periodically updated and changes will be incorporated into subsequent editions. If you have encountered an error, please notify us at support@taborelec.com. All specifications are subject to change without prior notice.

Except as stated above, Tabor Electronics Ltd. makes no warranty, express or implied (either in fact or by operation of law), statutory or otherwise; and except to the extent stated above, Tabor Electronics Ltd. shall have no liability under any warranty, express or implied (either in fact or by operation of law), statutory or otherwise.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Tabor Electronics, and shall not, without express written permission of Tabor Electronics, be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Tabor Electronics. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents, which specify procurement of products from Tabor Electronics.

Table of Contents

Table of Contents.....	3
List of Figures.....	3
List of Tables.....	4
Document Revision History.....	4
Acronyms & Abbreviations	5
1 General	8
1.1 Scope	8
1.2 Software Support.....	9
1.3 Document Conventions	9
1.4 Safety.....	9
1.5 Maintenance.....	11
1.5.1 Preventive Maintenance	11
1.5.2 Long Term Storage or Repackaging For Shipment	11
2 Introduction	12
2.1 Unpacking	12
2.2 Front Panel	12
2.3 Rear Panel.....	13
3 Troubleshooting.....	14
3.1 Manually Installing Instrument Drivers	14
3.1.1 USB Device Driver Manual Installation (Windows 10)	14
3.1.2 USB Device Driver Manual Installation (Windows 7)	21
4 Lucid Rack-mount Specifications	25
4.1 Frequency	25
4.2 Amplitude	25
4.3 Phase Noise and Harmonics	26
4.4 Modulation	27
4.5 Inputs.....	28
4.6 Outputs.....	29
4.7 General	29

List of Figures

Figure 1.1 LS1294R – 12GHz Four Channel RF Analog Signal Generator	9
Figure 2.1 LS6084R4 Front Panel	12
Figure 2.2 Rear Panel for 4 Channels	13

List of Tables

Table 1.1 Ordering Information	8
Table 4.1 Frequency Specification	25
Table 4.2 Amplitude Specification	25
Table 4.3 Phase Noise and Harmonics Specification	26
Table 4.4 Modulation Specification	27
Table 4.5 Inputs Specification	28
Table 4.6 Outputs Specification	29
Table 4.7 General Specification	29

Document Revision History

Table Document Revision History

Revision	Date	Description	Author
1.1	24-Mar-21	<ul style="list-style-type: none"> • 1.2 Software Support, page 9– New. • Removed sections “Lucid Software Requirements”, “Installation, “PC Control Software”, “Troubleshooting”, and “FPGA Firmware Update” that are included in the new “Lucid Control Panel User Manual”. • Removed section SCPI Programming that is included in the new “Lucid Programming Manual”. • Table 4.4 Modulation Specification, page 27 – Changed Sweep Dwell Time from “10 μs to 1,000 s” to “100 μs to 1,000 s”. 	Jakob Apelblat
1.0	6-Aug-20	<ul style="list-style-type: none"> • Original release supporting Lucid SW Rev. 1.2.0 and SPI & SCPI Commands List Summary Rev. 1.14. 	Jakob Apelblat

Acronyms & Abbreviations

Table Acronyms & Abbreviations

Acronym	Description
μs or us	Microseconds
ADC	Analog to Digital Converter
AM	Amplitude Modulation
ASIC	Application-Specific Integrated Circuit
ATE	Automatic Test Equipment
AWG	Arbitrary Waveform Generators
AWT	Arbitrary Waveform Transceiver
BNC	Bayonet Neill–Concelm (coax connector)
BW	Bandwidth
CW	Carrier Wave
DAC	Digital to Analog Converter
dBc	dB/carrier. The power ratio of a signal to a carrier signal, expressed in decibels
dBm	Decibel-Milliwatts. E.g., 0 dBm equals 1.0 mW.
DDC	Digital Down-Converter
DHCP	Dynamic Host Configuration Protocol
DSO	Digital Storage Oscilloscope
DUC	Digital Up-Converter
ENoB	Effective Number of Bits
ESD	Electrostatic Discharge
EVM	Error Vector Magnitude
FPGA	Field-Programmable Gate Arrays
GHz	Gigahertz
GPIO	General Purpose Interface Bus
GS/s	Giga Samples per Second
GUI	Graphical User Interface
HP	Horizontal Pitch (PXIe module horizontal width, 1 HP = 5.08mm)
Hz	Hertz

Acronym	Description
IF	Intermediate Frequency
I/O	Input / Output
IP	Internet Protocol
IQ	In-phase Quadrature
IVI	Interchangeable Virtual Instrument
JSON	JavaScript Object Notation
kHz	Kilohertz
LCD	Liquid Crystal Display
LO	Local Oscillator
MAC	Media Access Control (address)
MDR	Mini D Ribbon (connector)
MHz	Megahertz
ms	Milliseconds
NCO	Numerically Controlled Oscillator
ns	Nanoseconds
PC	Personal Computer
PCAP	Projected Capacitive Touch Panel
PCB	Printed Circuit Board
PCI	Peripheral Component Interconnect
PXI	PCI eXtension for Instrumentation
PXIe	PCI Express eXtension for Instrumentation
QC	Quantum Computing
Qubits	Quantum bits
R&D	Research & Development
RF	Radio Frequency
RT-DSO	Real-Time Digital Oscilloscope
s	Seconds
SA	Spectrum Analyzer
SCPI	Standard Commands for Programmable Instruments
SFDR	Spurious Free Dynamic Range

Acronym	Description
SFP	Software Front Panel
SMA	Subminiature version A connector
SMP	Subminiature Push-on connector
SPI	Serial Peripheral Interface
SRAM	Static Random-Access Memory
TFT	Thin Film Transistor
T&M	Test and Measurement
TPS	Test Program Sets
UART	Universal Asynchronous Receiver-Transmitter
USB	Universal Serial Bus
VCP	Virtual COM Port
Vdc	Volts, Direct Current
V p-p	Volts, Peak-to-Peak
VSA	Vector Signal Analyzer
VSG	Vector Signal Generator
WDS	Wave Design Studio

1 General

1.1 Scope

The scope of this manual is to describe the setup and operating procedures of the Lucid Series RF Analog Signal Generator. The manual covers the following models listed in the below ordering information.

Table 1.1 Ordering Information

Model	Description
LS3081R	3GHz 1CH rack-mounted Analog Signal Generator
LS3082R	3GHz 2CH rack-mounted Analog Signal Generator
LS3084R	3GHz 4CH rack-mounted Analog Signal Generator
LS30816R	3GHz 16CH rack-mounted Analog Signal Generator
LS6081R	6GHz 1CH rack-mounted Analog Signal Generator
LS6082R	6GHz 2CH rack-mounted Analog Signal Generator
LS6084R	6GHz 4CH rack-mounted Analog Signal Generator
LS60816R	6GHz 16CH rack-mounted Analog Signal Generator
LS1291R	12GHz 1CH rack-mounted Analog Signal Generator
LS1292R	12GHz 2CH rack-mounted Analog Signal Generator
LS1294R	12GHz 4CH rack-mounted Analog Signal Generator
LS12916R	12GHz 16CH rack-mounted Analog Signal Generator
Options	
Pulse	Pulse Modulation
FS	Fast Switching option 100us
SD	Removable SD memory card
W-Rack	Rack mount kit
Emulator pack	Emulator for Keysight, R&S, Anapico, and Holzworth



Figure 1.1 LS1294R – 12GHz Four Channel RF Analog Signal Generator

1.2 Software Support

The **Lucid Control Panel** is a software package that comes on a CD supplied with the device. It enables full control and programming of your Tabor Electronics Lucid series RF analog signal generators via a user-friendly graphical user interface. The **TE Update Tool** is a utility for updating the Lucid device FPGA. The **Lucid Programming Manual** lists and describes the set of SCPI-compatible (Standard Commands for Programmable Instruments) remote commands used to operate the Lucid devices. The programs and the user manuals can be downloaded from the Tabor Electronics website at <http://www.taborelec.com/downloads>.

1.3 Document Conventions

Convention	Description	Example
Bold Writing	Indicates an item/message in the User Interface.	Click the On button.
<Angled and Bolded Brackets>	Indicates a physical key on the keyboard.	Press <Ctrl>+.
Caution! A Caution indicates instructions, which, if not followed, may result in damage to the equipment or to the loss of data.		
Note A Note provides additional information to help obtain optimal equipment performance.		
Idea An Idea provides an alternate procedure to obtain the same results.		

1.4 Safety

To avoid Electrical Shock, fire or personal injury:

- Use only the proper power cord and certified for the country of use.
- This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, the grounding conductor must be connected to the ground. Before connecting to the power input or output, ensure that the product is properly grounded.
- Do not operate this product with removed covers or panels.
- Observe all the ratings and markings on the product. Search this manual for further rating information, before connecting to it. Do not apply potential that is higher than the maximum rating.
- Do not operate in dark or wet conditions.
- Do not operate in an explosive environment. Keep product clean and dry.

1.5 Maintenance

1.5.1 Preventive Maintenance

There are no hardware adjustments within Lucid Generators. Tabor Electronics Ltd., recommends that the Lucid Generator is calibrated every 12 months or whenever a problem is suspected. The specific calibration interval depends upon the accuracy required. No periodic preventive maintenance is required.

1.5.2 Long Term Storage or Repackaging For Shipment

If the instrument is to be stored for a long period of time or shipped immediately, proceed as directed below. If you have any questions, contact your local Tabor Electronics representative or the Tabor Electronics Customer Service Department.

1. Repack the instrument using the wrappings, packing material and accessories originally shipped with the unit. If the original container is not available, purchase replacement materials.
2. Be sure the carton is well sealed with strong tape or metal straps.
3. Mark the carton with the model and serial number. If it is to be shipped, show sending and return address on two sides of the box.

If the instrument is to be shipped for service or repair, the following information must be included with the shipment:

- ◆ Name and address of the owner.
- ◆ Record the model and serial number of the instrument, options, and firmware version.
- ◆ Note the problem and symptoms – detailed information will help in verifying the problem
 - What was the instrument setup?
 - Did the unit work; then fail?
 - What other equipment was connected to the generator when the problem occurred?
- The name and telephone number of someone familiar with the problem who can be contacted by Tabor Electronics if any further information is required.
- Show the returned authorization order number (RMA) as well as the date and method of shipment.

Note

Always obtain a return authorization number from the factory before shipping the instrument to Tabor Electronics.

2 Introduction

The Lucid Series Rackmount platform is designed to offer maximum channel density at minimum cost of space. The rack-mounted platform, offers up to 4 phase coherent channels in a 19" 1U box and up to 16 phase coherent channels in a 3U, 19" box. It provides extremely fast switching speed, superior signal integrity and purity, a removable memory card for maximum security, all the necessary modulated signals for analog communication systems, and with built in LAN and USB interfaces. The Lucid Series is designed to meet today's most demanding specifications that is needed from the R&D benches to the production lines.

2.1 Unpacking

Check that the packaging is undamaged. If packaging is damaged, notify the carrier immediately. The Lucid benchtop model instrument is supplied with:

- Power cord with a plug according to customer country standard.
- USB cable for connecting a control PC to the instrument.
- CD with Lucid software, user manual and instrument drivers.

Caution!


The Lucid Series RF Signal Generator ships in an antistatic package to prevent damage from electrostatic discharge (ESD). When storing the unit, use the antistatic case.

2.2 Front Panel



Figure 2.1 LS6084R4 Front Panel



- **Power Button**  – Turn on or off the device.
- **SD CARD** – Removable SD card for instrument security. It is used for storing all data about used frequencies for PATTERN in the Modulation, the List, and System tabs.
 - ♦ Min capacity 4GB
 - ♦ Max capacity 16GB
 - ♦ Speed grade 10
 - ♦ Can be used with SD to micro SD adapter
- **CH1...CH16** - Up to sixteen SMA type connectors for RF signal output.

2.3 Rear Panel



Figure 2.2 Rear Panel for 4 Channels

- **Reference:**
 - ♦ **10/100MHz IN** – BNC type connector for external 10 MHz or 100 MHz signal. This input is normally used for synchronizing system components to a single clock reference.
 - ♦ **10 MHz OUT** – BNC type connector for 10 MHz signal output. The output is used to synchronize other system devices to the Lucid Rack-mount clock reference.
 - ♦ **100 MHz OUT** – BNC type connector for 100 MHz signal output. The output is used to synchronize other system devices to the Lucid Rack-mount clock reference.
- **MODULATION IN** – Up to four BNC type connectors, one for each channel, for an input from an external amplitude modulation source.
- **TRIGGER IN** – Up to four BNC type connectors, one for each channel, for an input from an external trigger source.
- **LAN + USB HOST** –
 - ♦ **RJ45** – 100BaseT Ethernet connector for connecting a control PC via the LAN.
 - ♦ **USB Type A** – USB 2 Type A interface for connecting a USB device such as a memory device for storing and recalling instrument setups, keyboard or mouse.
- **USB DEVICE** – USB 2 Type B connector for connecting a control PC.
- **POWER FUSE T6.3A/250V** – Fuse glass 6.3 A 250 VAC 5X20 mm Slo-Blo.
- **AC Power Socket**– 3 Pins IEC320 C14 Inlet Power Plug Socket.

Note


The Lucid generator will automatically revert to external reference when a signal is detected at its input.

3 Troubleshooting


3.1 Manually Installing Instrument Drivers

3.1.1 USB Device Driver Manual Installation (Windows 10)


1. Download the latest Lucid series USB device driver from www.taborelec.com/downloads.
1. Using the supplied USB cable, connect the Lucid benchtop model to the PC.
2. Open the **Start** menu, and in the search field, type **Device Manager**.

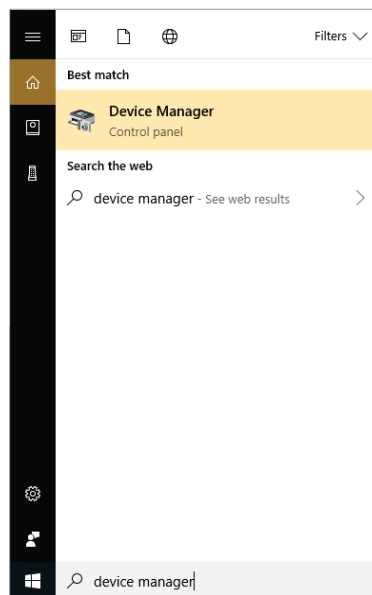


3. In the search results list, select **Device Manager**.
The **Device Manager** window opens.

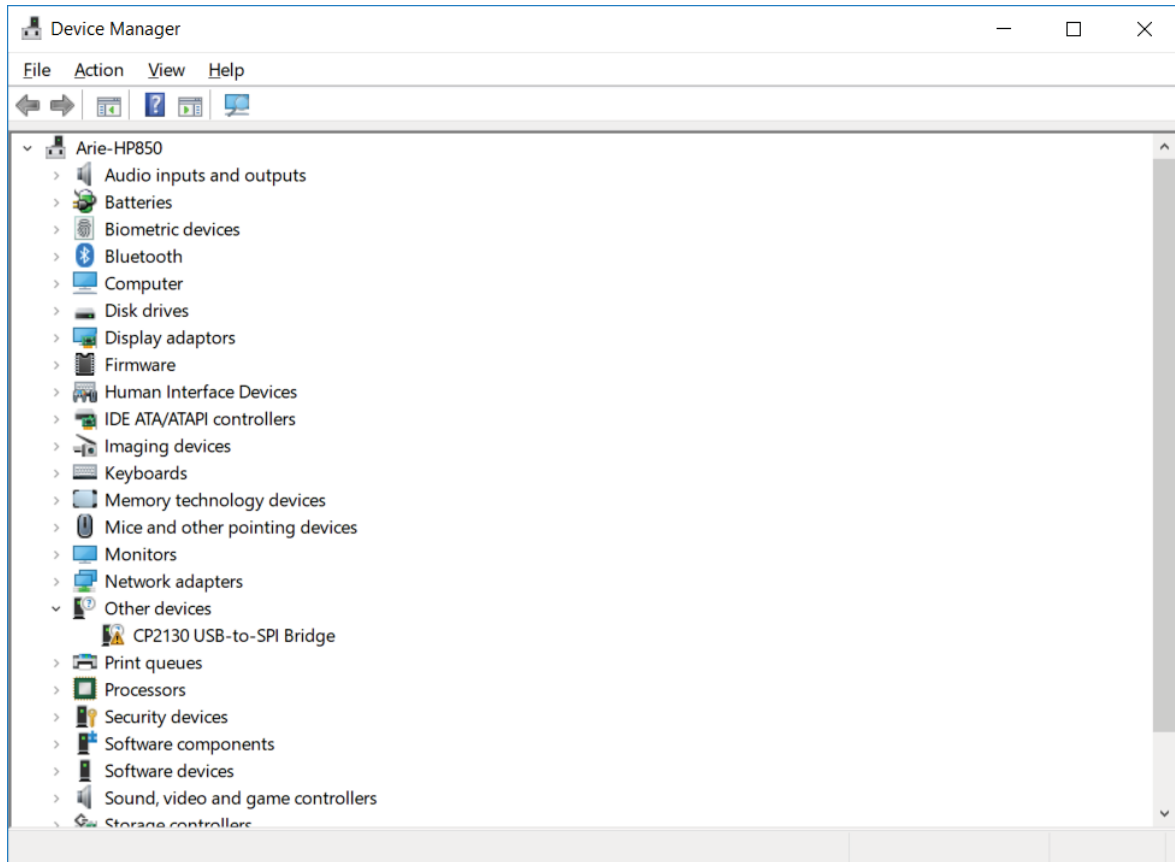


4. In the navigation tree, expand **Other devices** and double click on **CP2130 USB-to-SPI Bridge**.

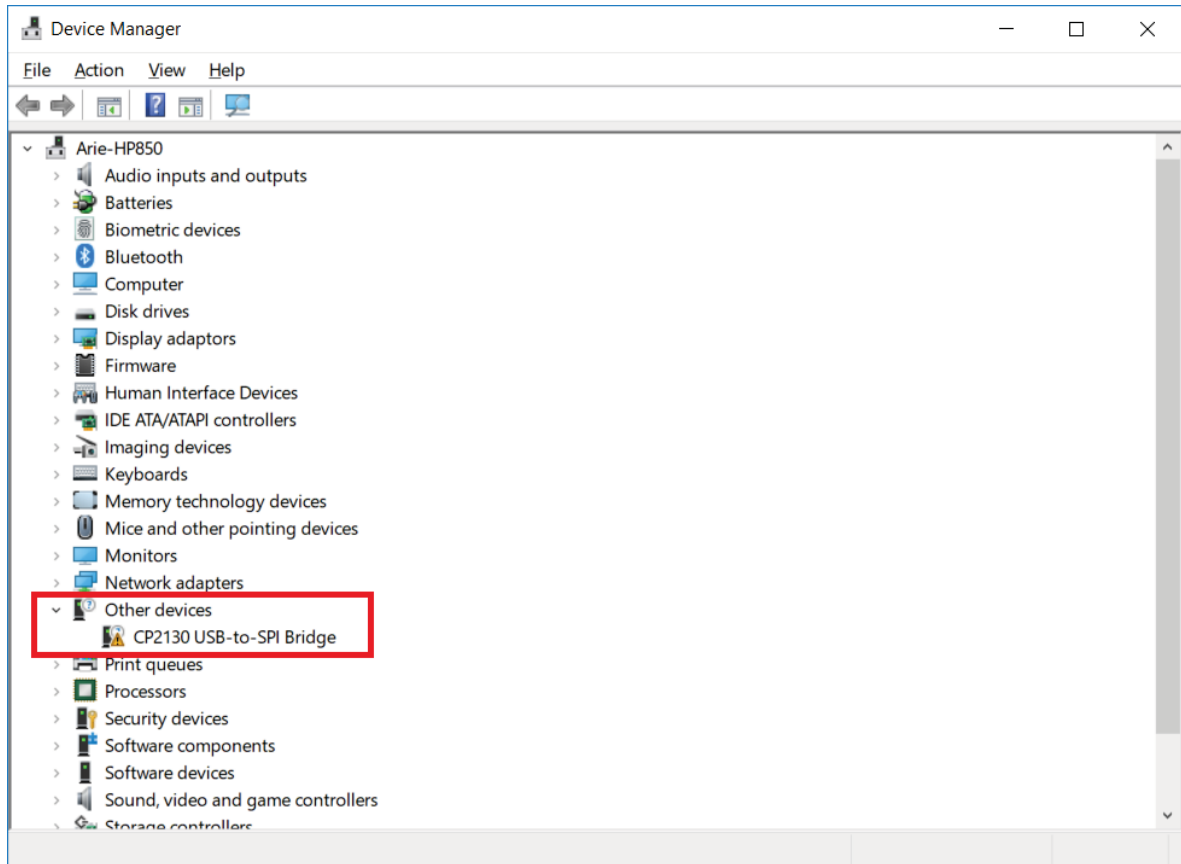


5. The **CP2130 USB-to-SPI Bridge Properties** window opens.
Click **Update Driver**.

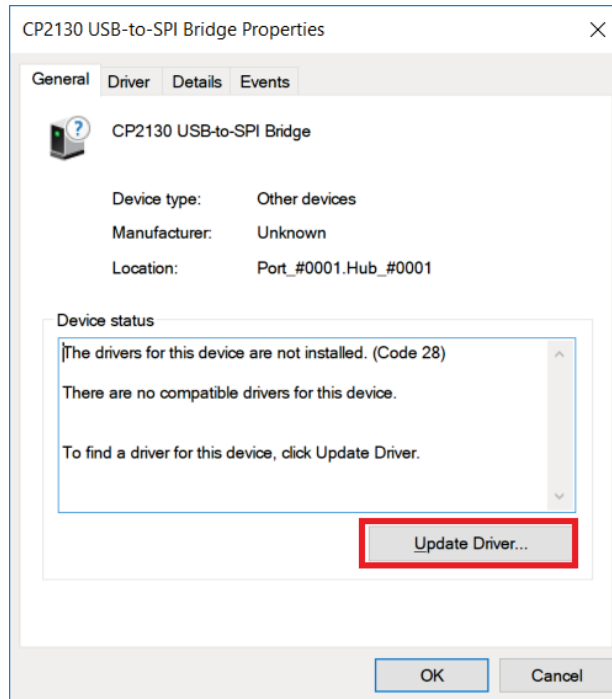


6. In the **Update Drivers - CP2130 USB-to-SPI Bridge** window, select **Browse my computer for driver software**.

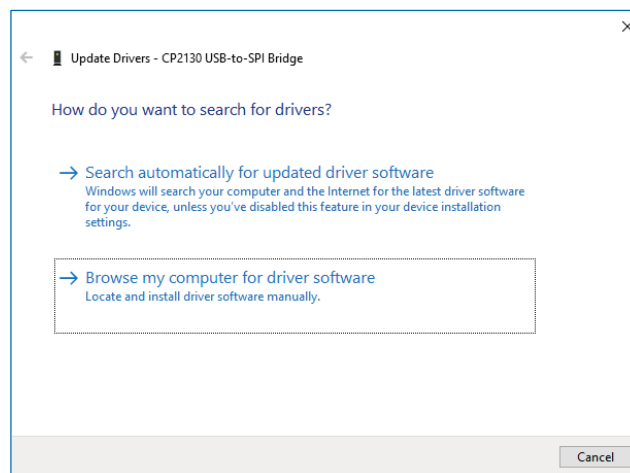


7. Browse to the driver software location on PC, select its folder and click **OK**.

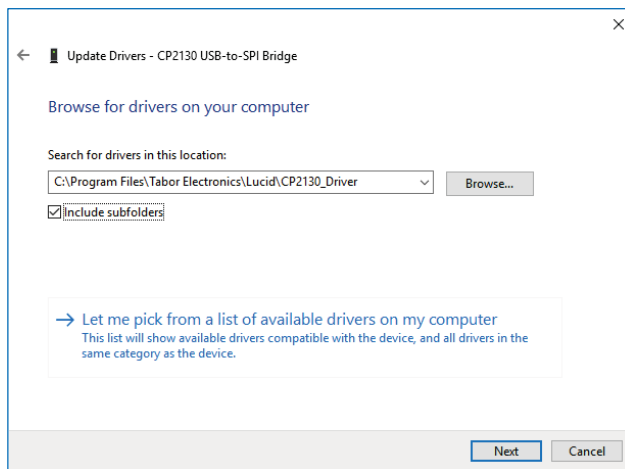


8. Driver download begins.

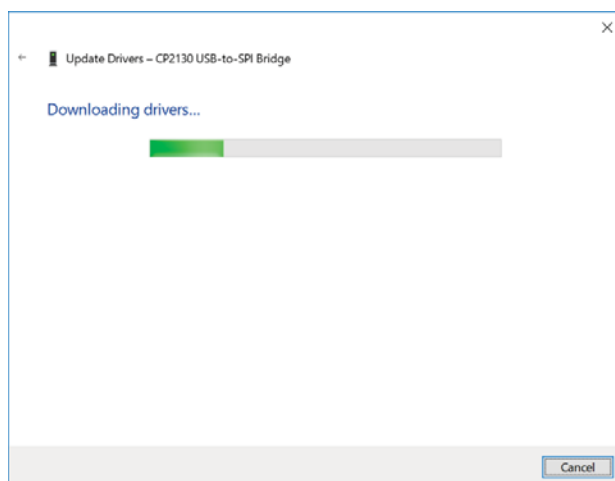

9. After the download is complete, the driver installation begins.

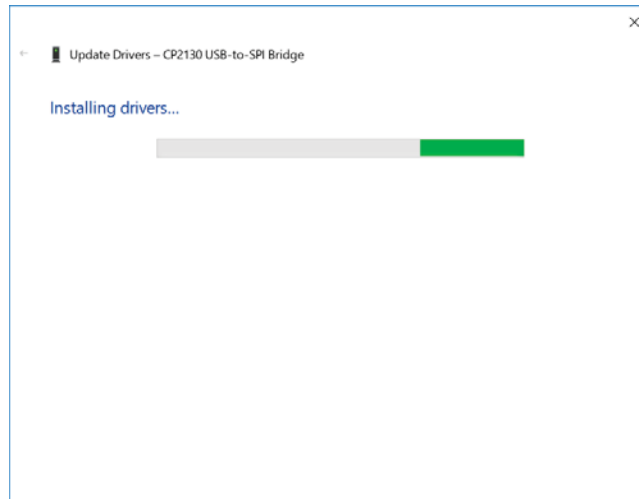


10. After the installation is complete, the following success message is displayed:

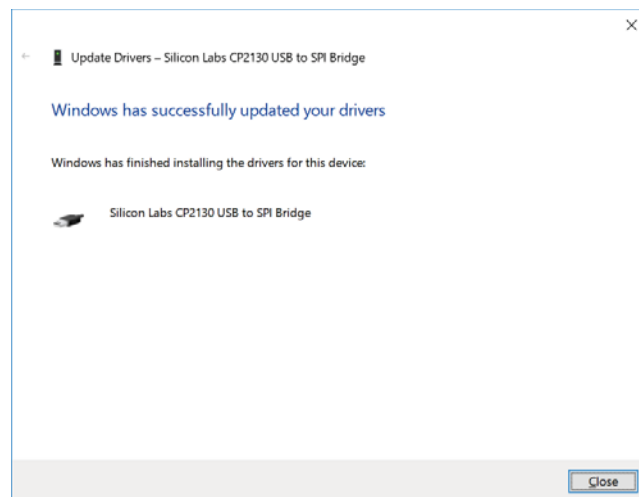


11. Click Close to close the Update Drivers window and to proceed.

12. In the **CP2130 USB-to-SPI Bridge Properties** window the displayed device status should be: **The device is working properly.**

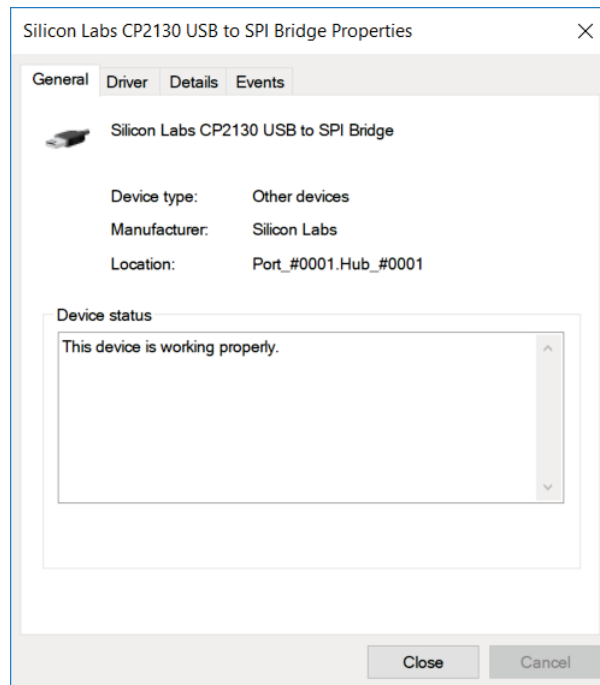


3.1.2 USB Device Driver Manual Installation (Windows 7)

1. Download the latest Lucid series USB device driver from the Tabor Electronics Ltd., website. Device drivers are available at www.taborelec.com/downloads
2. Connect the Lucid Generator to the PC using the supplied USB Cable.

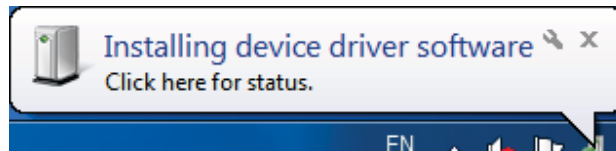


The **Installing Device Driver Software** message is displayed at the lower-right part of the screen.


3. Wait for the following messages to appear:

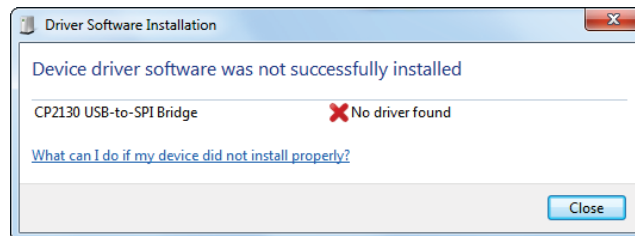


4. Click **Close**.
5. Open the **Start** menu, and in the search field, type **Device Manager**.
6. In the search results list, select **Device Manager**. The **Device Manager** window opens.
7. In the navigation tree, expand **Other devices** and select **CP2130 USB-to-SPI Bridge**.

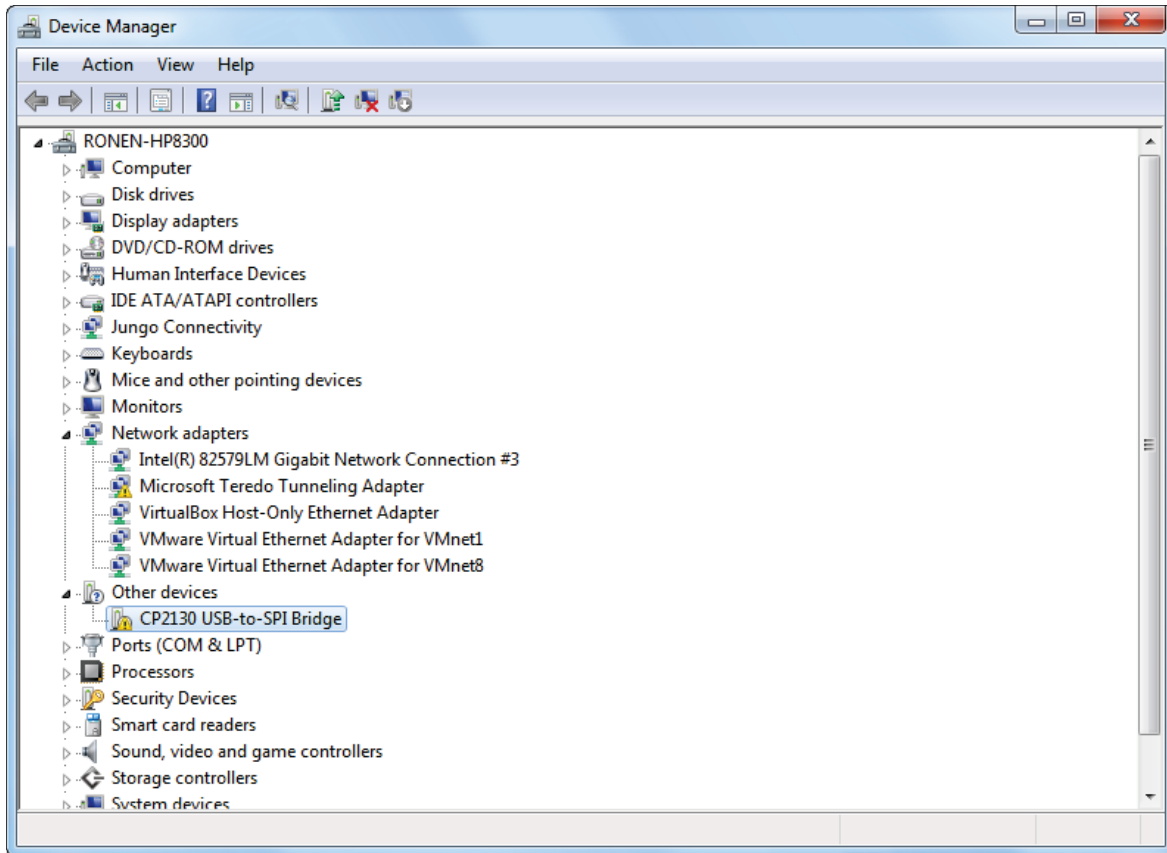


8. In the **Update Drivers - CP2130 USB-to-SPI Bridge** window, select **Browse my computer for driver software**.

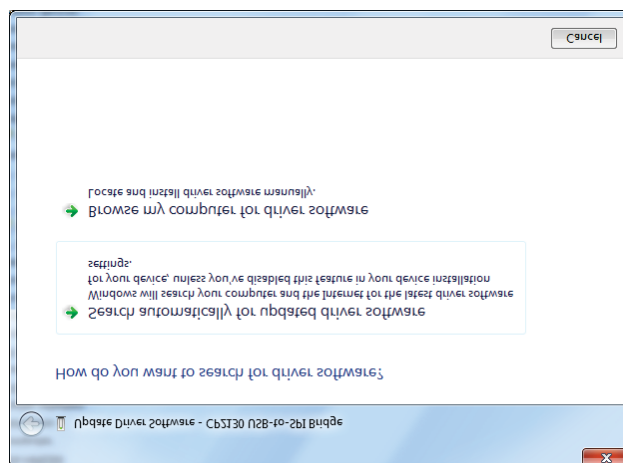


9. Browse to the driver software location on PC, select the folder and click **Next**. Driver installation begins.

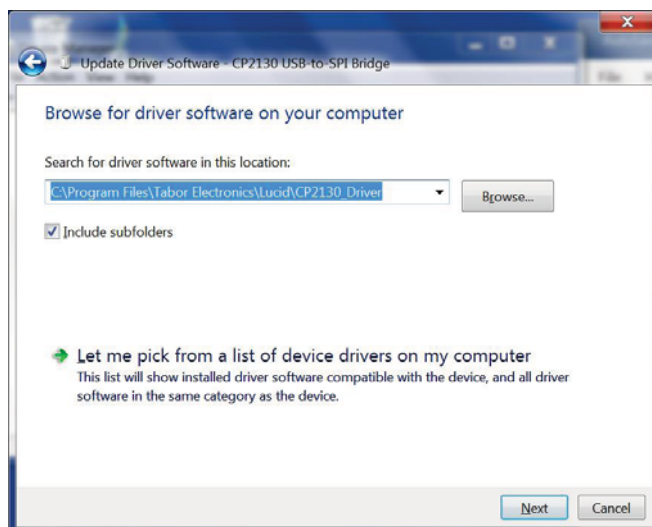


10. After the driver software installation is complete, click **Close**.

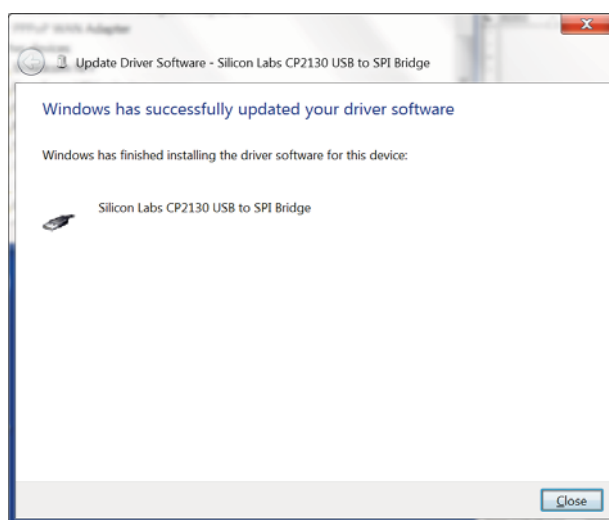

11. In the Device Manager, under Silicon Labs USB Devices, click **Silicon Labs CP2130 USB to SPI Bridge**.

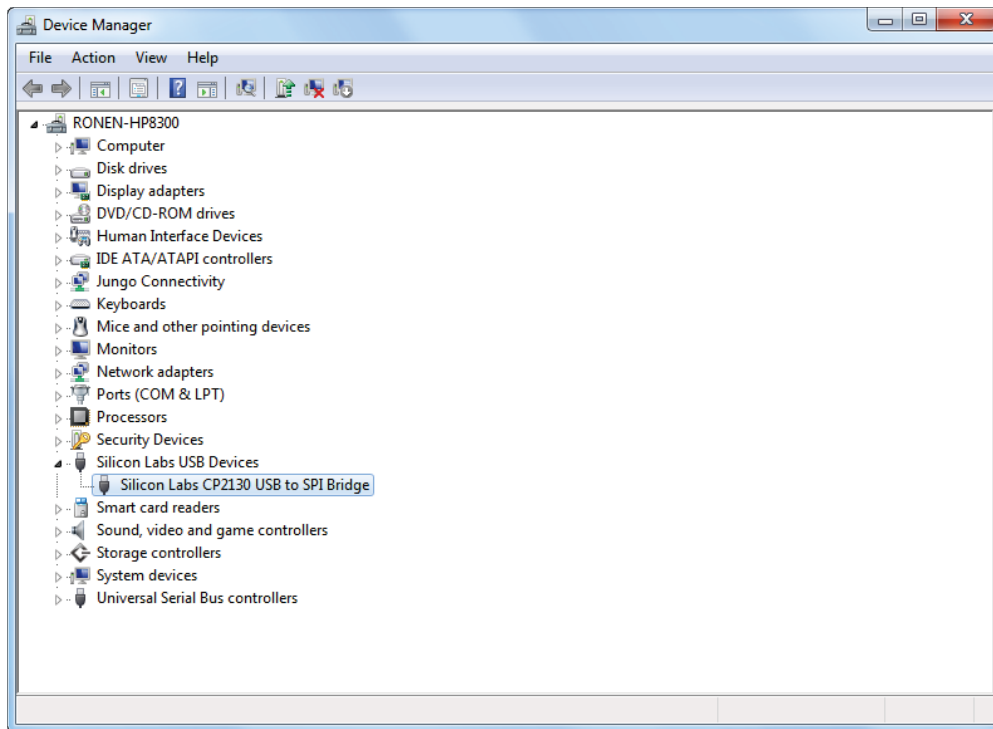

12. In the **CP2130 USB-to-SPI Bridge Properties** window the device status should indicate the device is working properly.

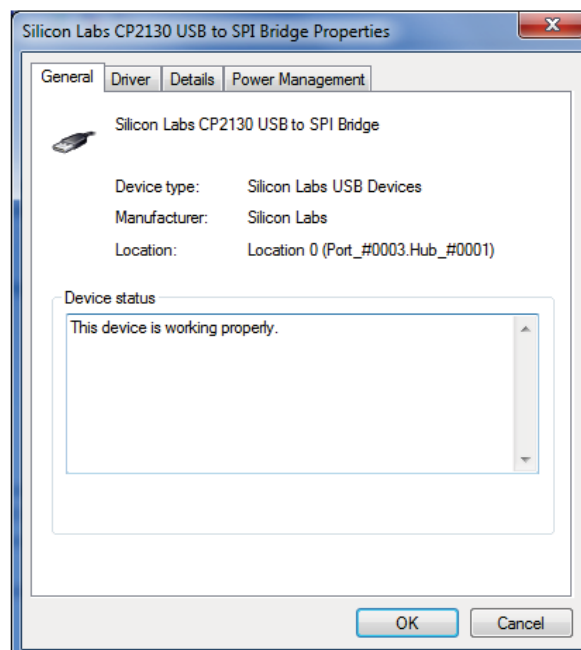

4 Lucid Rack-mount Specifications

4.1 Frequency

Table 4.1 Frequency Specification

Frequency	
Range	
LS3081R, LS3082R, LS3084R, LS30816R	9 kHz to 3 GHz
LS6081R, LS6082R, LS6084R, LS60816R	9 kHz to 6 GHz
LS1291R, LS1292R, LS1294R, LS12916R	9 kHz to 12 GHz
Resolution	0.001 Hz
Phase Offset	0.01 deg
Switching Speed	
Standard	500 μ s
FS Option	100 μ s
Frequency Reference	
Temperature Stability	± 25 ppb max
Aging	± 3 ppm max for 20 years
Warm Up time	30 min

4.2 Amplitude

Table 4.2 Amplitude Specification

Amplitude	
Max Output Power	
Settable	+20 dBm
Calibrated	+15 dBm ¹
Min Output Power	
Settable	-100 dBm
Calibrated	-80 dBm
Resolution	0.01 dB
Power Mute	-95 dBm
Output Return Loss	-10 dBm

Accuracy (dB)	-50 dBm to +15 dBm	-90 dBm to -50 dBm
Up to 100 MHz	±0.3 (typ.)	±0.5 (typ.)
100 MHz to 3 GHz	±0.4 (typ.)	±0.6 (typ.)
3 GHz to 9 GHz	±0.7 (typ.)	±0.9 (typ.)
Above 9 GHz	±1 (typ.)	±1.5 (typ.)

¹ Above 25 kHz.

4.3 Phase Noise and Harmonics

Table 4.3 Phase Noise and Harmonics Specification

Phase Noise (dBc/Hz)	
Measured @ 10 kHz Offset)	
1 GHz	-138 (typ.)
2 GHz	-133 (typ.)
3 GHz	-130 (typ.)
6 GHz	-124 (typ.)
12 GHz	-118 (typ.)
Harmonics (dBc)	
Up to 100 MHz	-30 dBc
100 MHz to 12 GHz	-50 dBc ²
Sub-harmonics (dBc)	
6 to 12 GHz:	-55 dBm
Non-harmonics (dBc)	
Up to 12 GHz	-90 dBc (typ.) ^{3,4} , -60 dBc (max.) ⁵

² 750 MHz to 900 MHz -35dBc (typ.).

³ -60 dBm max. @ 1 GHz, 1.5 GHz, 2.5 GHz and 3 GHz.

⁴ -75 dBm max. @ -15 dBm to +15 dBm and f > 6 GHz.

⁵ Boundary spurs which may appear @ -100 MHz to +100 MHz offset from CW.

4.4 Modulation

Table 4.4 Modulation Specification

Modulation	
Frequency Modulation	
Maximum Deviation	10 MHz
Resolution	0.1 % or 1 Hz (the greater)
Modulation Rate	1 MHz
Resolution	1 Hz
Amplitude Modulation	
AM Depth	
Type	Linear
Maximum Settable	90 %
Resolution	0.1 % of depth
Accuracy (1 kHz)	< $\pm 4\%$ of setting
Modulation Rate	DC to 100 kHz
Phase Modulation	
Peak Deviation	360 deg
Modulation Rate	DC to 100 kHz
Pulse Modulation (PLS Option)	
On/off Ratio	80 dB
Rise/fall Time (10%-90%)	15 ns (typ.)
Resolution	6.4 ns
Minimum Width	32 ns
Repetition Frequency	DC to 10 MHz
Pattern Modulation (PAT Option)	
Number of Steps	1 to 2,048
Step Repetitions	1 to 65,535
ON/Off Time	32 ns to 20 days
Sweep	
Range	Same as frequency range
Modes	Frequency and amplitude step, list

Dwell Time	100 μ s to 1,000 s
Resolution	1 μ s
Number of Points	
List	2 to 4, 096
Step	2 to 65,535
Step Change	Linear
Trigger	Free run, External, Bus, Timer

4.5 Inputs

Table 4.5 Inputs Specification

Inputs	
Modulation	
Connector Type	BNC (per channel)
Input Impedance	50 Ω
Maximum Input Voltage	± 1 V
Input Damage Level	± 3.5 V
Pulse/Trigger	
Connector Type	BNC (per channel)
Input Impedance	50 Ω
Input Voltage	TTL, CMOS compatible
Threshold	1.5 V
Damage level	-0.42 V
	+5.42 V
External Reference	
Connector Type	1 x BNC
Input Impedance	50 Ω
Waveform	Sine or Square
Frequency	10 MHz/100 MHz
Power	-3 dBm to +10 dBm
Absolute Maximum Level	+15 dBm
Locking Range	± 2 ppm

4.6 Outputs

Table 4.6 Outputs Specification

Outputs	
RF Out	
Impedance	50Ω
Connector Type	SMA
Number of Outputs	
LS3081/6081/1291R	1
LS3082/6082/1292R	2
LS3084/6084/1294R	4
LS30816/60816/12916R	16
Reference Out	
Impedance	50 Ω
Connector Type	2 x BNC
Frequency	10 MHz, 100 MHz
Shape	Sine
Power	3 to 7 dBm

4.7 General

Table 4.7 General Specification

General	
Voltage Range	90 VAC to 264 VAC
Frequency Range	47 Hz to 63 Hz
Power Consumption	
1U Box	100 W
3U Box	400 W
Interface	
Host	2 x front panel USB type A 1 x rear panel USB type A
Device	1 x rear panel USB type B
LAN	1 x rear panel 1000/100/10 BASE-T
Storage	32 GB removable SD card

Dimensions (WxHxD)	
1 U Box	450 x 43 x 500 mm
3 U Box	450 x 129 x 500 mm
Weight	
Without Package	
1U Box	6 kg
3U Box	12 kg
Shipping Weight	
1U Box	7 kg
3U Box	13 kg
Temperature	
Operating	0°C to +40°C
Storage	-40°C to +70°C
Warm up Time	15 minutes
Humidity:	85% RH, non-condensing
Safety	CE Marked, IEC61010-1:2010
EMC	IEC 61326-1:2013
Calibration	2 years
Warranty	1-year or 3-year warranty plans

Distribution in the UK & Ireland



Lambda Photometrics Limited
 Lambda House Batford Mill
 Harpenden Herts AL5 5BZ
 United Kingdom
E: info@lambdaphoto.co.uk
W: www.lambdaphoto.co.uk
T: +44 (0)1582 764334
F: +44 (0)1582 712084